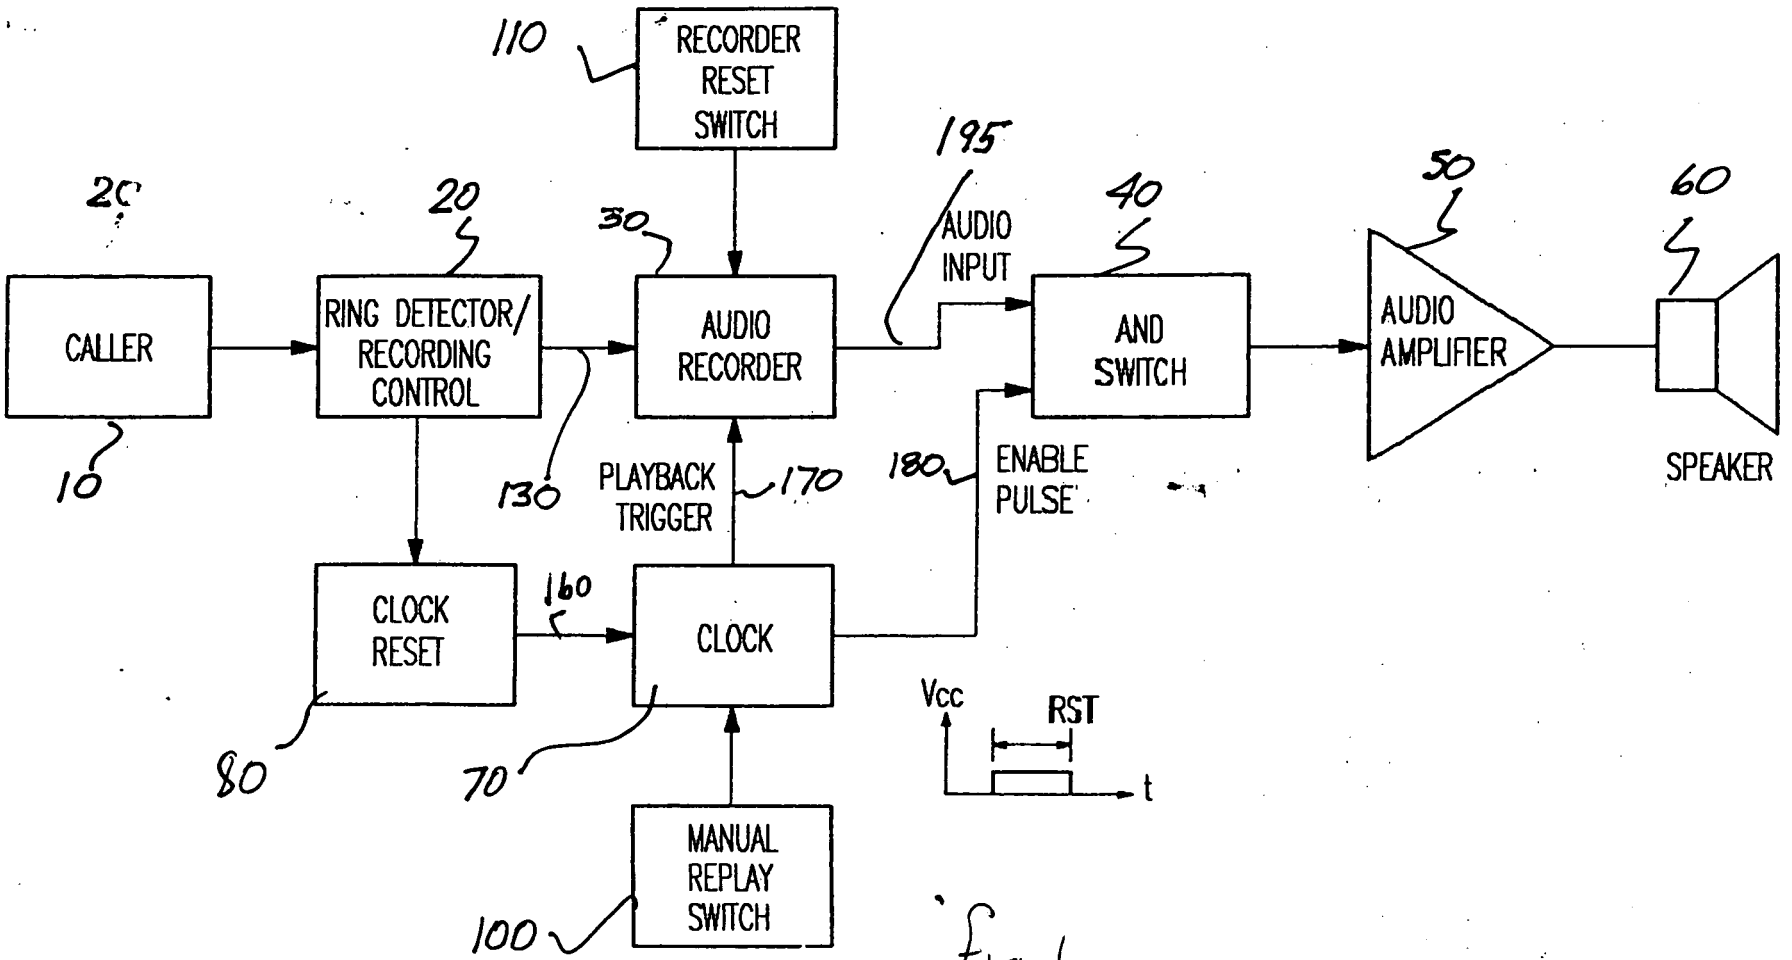
110
RECORDER RESET SWITCH
195
AUDIO INPUT
20
20
30
40
50
60
CALLER
RING DETECTOR/ RECORDING CONTROL
AUDIO RECORDER
AND SWITCH
AUDIO AMPLIFIER
SPEAKER
10
130
PLAYBACK TRIGGER
170
180
ENABLE PULSE
CLOCK RESET
160
CLOCK
Vcc
RST
t
80
70
MANUAL REPLAY SWITCH
100

Fig 1

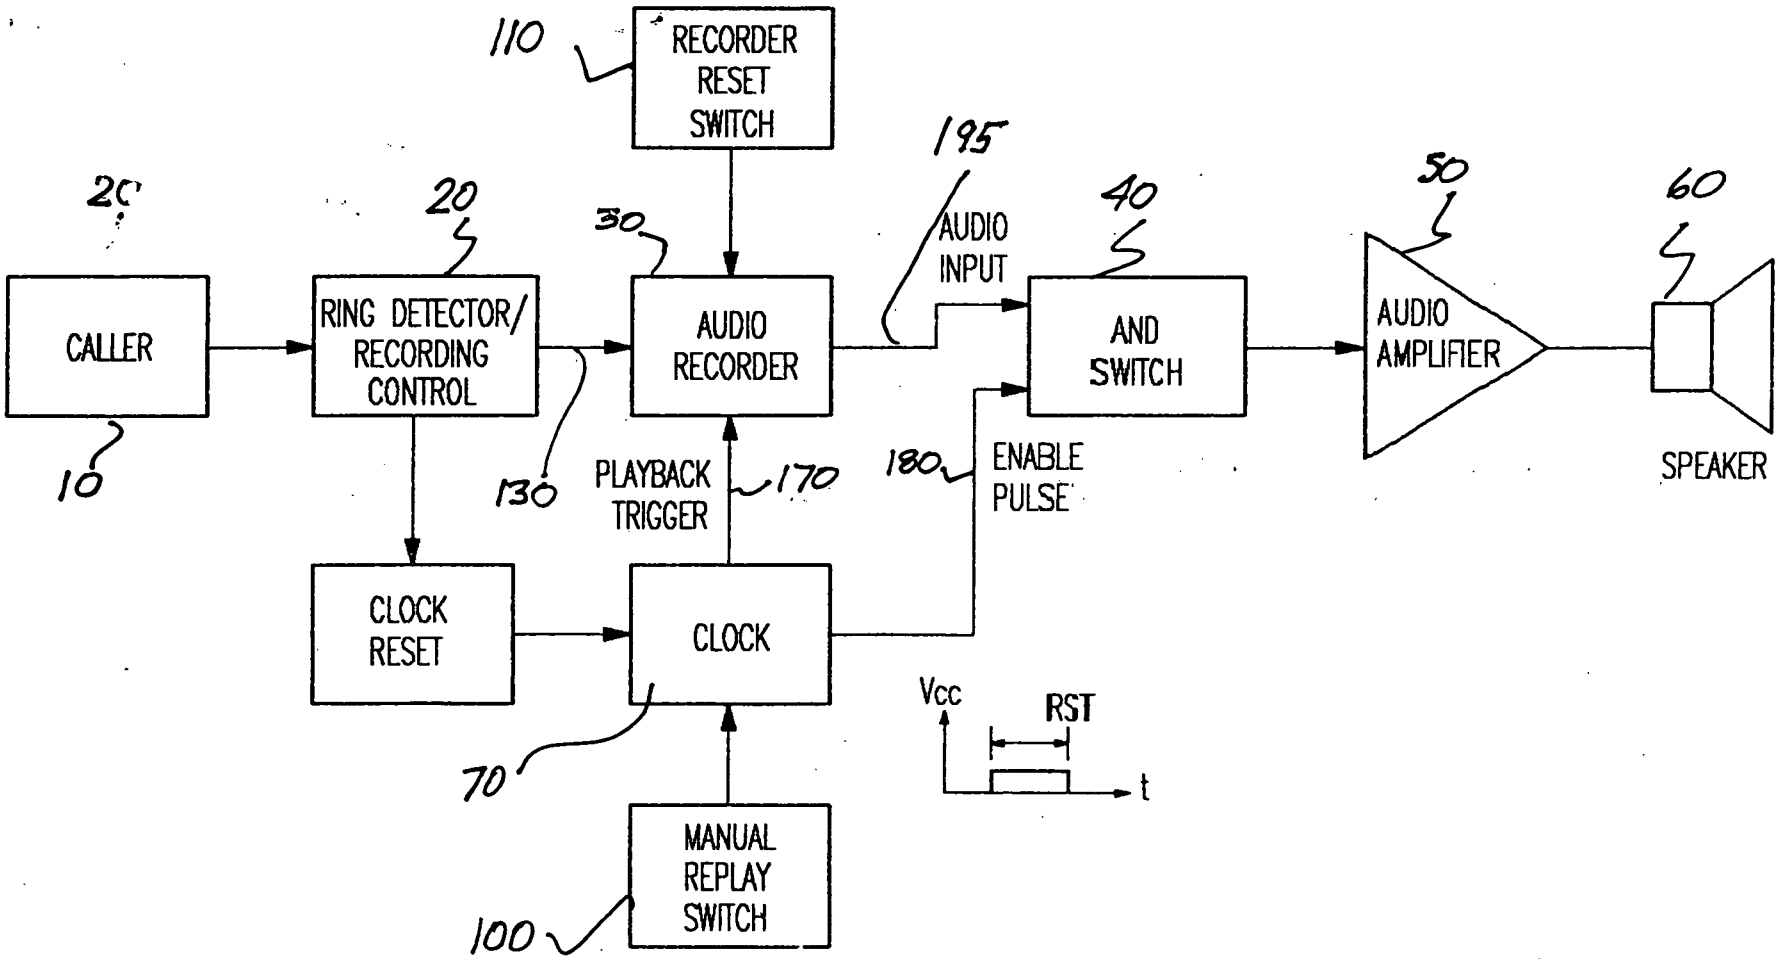
110
RECORDER RESET SWITCH
195
AUDIO INPUT
20'
20
30
40
50
60
CALLER
RING DETECTOR/ RECORDING CONTROL
AUDIO RECORDER
AND SWITCH
AUDIO AMPLIFIER
SPEAKER
10
130
PLAYBACK TRIGGER
170
180
ENABLE PULSE
CLOCK RESET
CLOCK
Vcc
RST
t
70
MANUAL REPLAY SWITCH
100